

FOAM APPLICATION PROCESS




the finishing touch

decorative architectural mouldings

(03) 9761 4774


finishingtouchmouldings.com.au

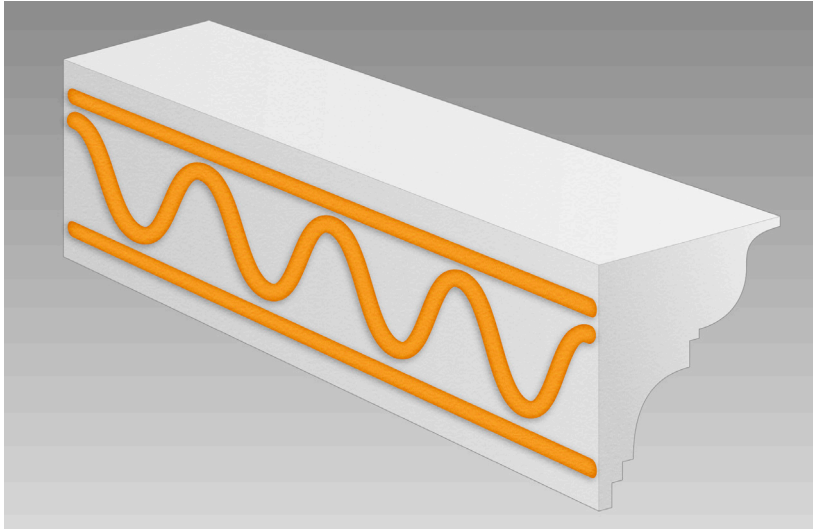

1

Apply DAP Touch N Seal Gun Foam II to the back of the moulding in approx 20mm bead in the pattern shown.


At this stage the moulding is pressed into place in its final position and immediately removed. Allow approx 5 minutes for the foam to begin to cure

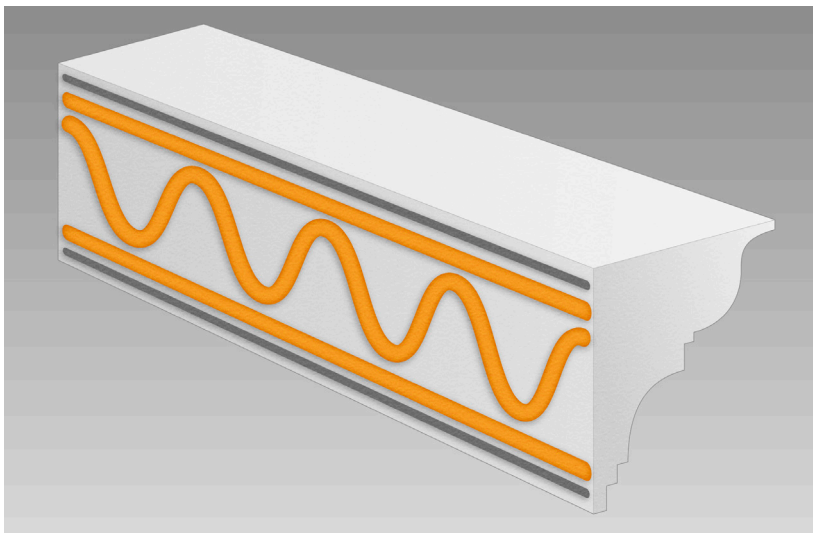

2

During the wait time apply beads of HB Fuller Ultraclear or B&L Proflex LM Sealant at top and bottom.

Once the 5 minutes have elapsed press moulding into position on wall

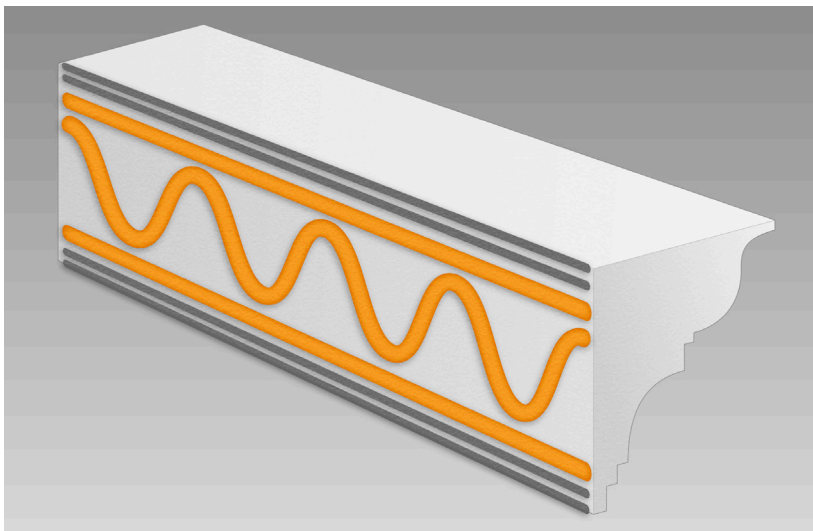

3

Once the moulding is in place, a final bead of HB Fuller Ultraclear or B&L Proflex LM Sealant is applied along the top and bottom edges where the moulding meets the wall

To view our range of Decorative Architectural Mouldings visit finishingtouchmouldings.com.au

To reorder DAP Touch n Seal products visit daptouchnseal.com.au or call 03 9761 4774